 
 
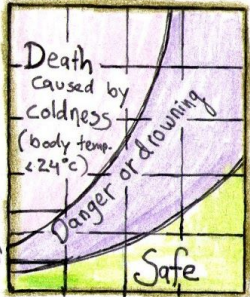 


"Where from the wind blows, there the current goes."

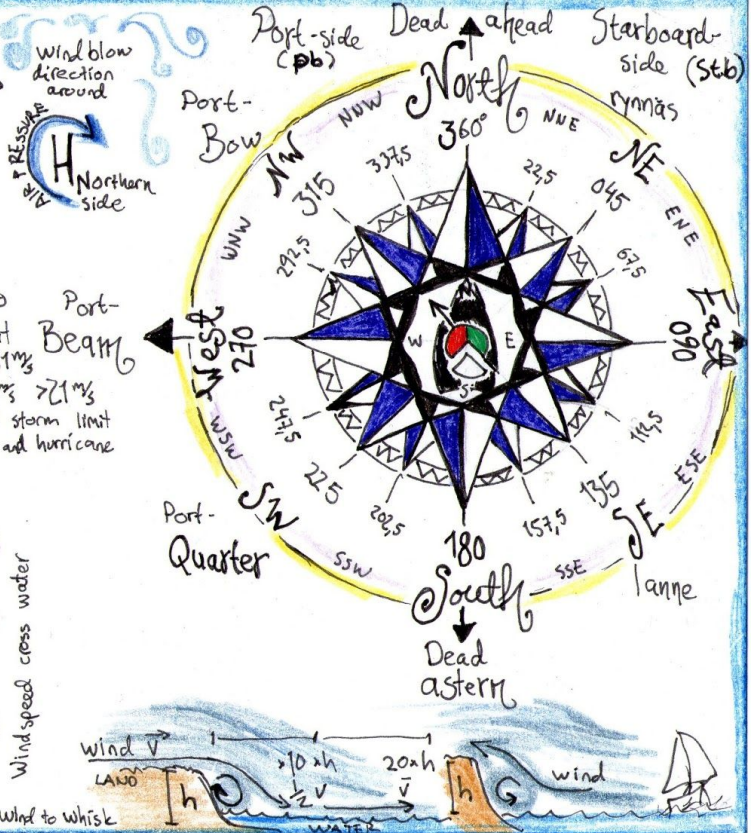

5 hours Stayed in water.  
 Warning to Seafarers at Beam  
 Baltic  $>11\text{ms}$   
 $<14\text{ms}$   $14-20\text{ms}$   $>21\text{ms}$   
 International storm limit  $>25\text{ms}$  and hurricane  $>33\text{ms}$

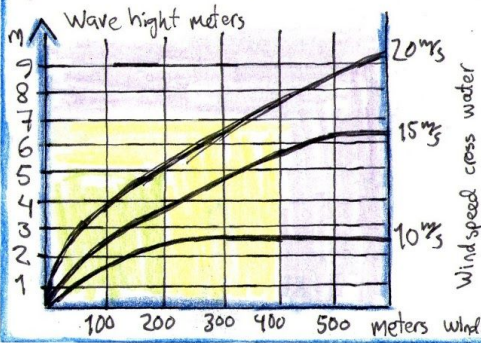

ABC 1 DEF 2 GHI 3 JKLMN O P QR 6 S UV 7 WYZ 8

1. flag  
2. flag  
3. flag

To be hoisted on a left side of the mast signal flags.  
 Foreigner flag states' flag to be hoist on starboard side of the mast.

Nav. Lights  
 $112,5^{\circ}$   
 $22,5^{\circ}$   
 $135^{\circ}/2 = 67,5^{\circ}$

Sailboats' give-away rules:  
 • If the wind from different sides: the one who has the wind from port-side (left), gives away  
 • If wind same side: the one who's on the wind's side, goes away (wind's side = where wind's blowing) (from/other side than mainsail is held)

SOUNDS  
 ↑ --- go a.o.k!  
 △ --- I go pass left.  
 .... Your means unclear  
 △ --- I go pass right.  
 • I go right.  
 • I go left.  
 my engine power goes stern

